

## How to Use CuisineClean:

1. Remove CuisineClean from its package and plug it in.
2. Make sure the drain hose is secure on the back of the unit to prevent from draining.
3. Place fruits, vegetables, or anything you wish to clean into CuisineClean.
4. Fill CuisineClean up with cold water. DO NOT fill up to the Max Fill Line. Fill approximately 1-2 inches below the Max Fill Line.
5. Close the lid and secure the side latches *after* the front latch is secure.
6. Turn the knob starting CuisineClean from 1-15 minutes (times will vary based on types of fruits and vegetables).

After cycle is finished you may detach the drain hose from the back of the unit to allow water to drain and you can turn the knob on again to spin excess water off of food.

The basket may be removed to clean excess dirt off and the machine itself should be wiped clean.